


# IMPORTANT

***Grounding Wire installation is required for proper operation!***

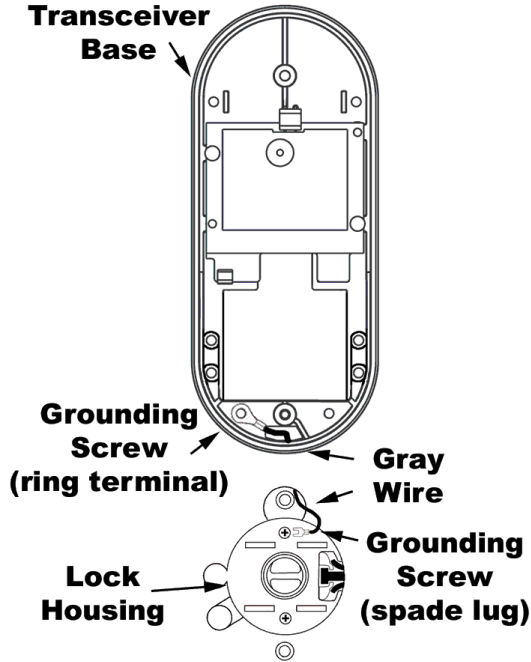


1. Route the Gray Wire (ring end) with the Motor/RTX wires from the bottom of the Transceiver Base, inside the door, to the top of the Lock Housing (spade end).
2. When mounting the Transceiver Base to the door connect the ring terminal of the Gray Wire under the Transceiver Base Grounding Screw (left bottom).
3. After installing the Lock Housing, connect the spade lug of the Gray Wire under the Lock Housing Grounding Screw (top).

**WyRELESS ACCESS**  
by RECOGNITION SOURCE

S413-000-002

# IMPORTANT

***Grounding Wire installation is required for proper operation!***

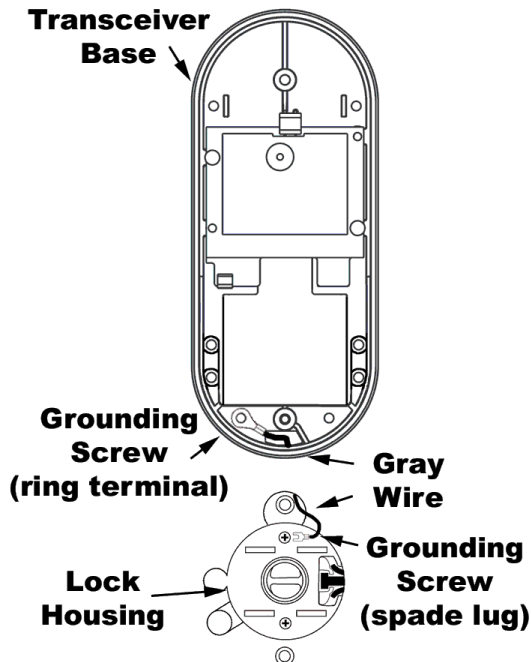

1. Route the Gray Wire (ring end) with the Motor/RTX wires from the bottom of the Transceiver Base, inside the door, to the top of the Lock Housing (spade end).
2. When mounting the Transceiver Base to the door connect the ring terminal of the Gray Wire under the Transceiver Base Grounding Screw (left bottom).
3. After installing the Lock Housing, connect the spade lug of the Gray Wire under the Lock Housing Grounding Screw (top).

**WyRELESS ACCESS**  
by RECOGNITION SOURCE

S413-000-002